

Assembly and Operating Instructions


Roller screen type SRK 380 / 6 - 1600

Semi-mobile secondary crushing plant - MODULE 2

Nordkalk AB
Lärbo / Schweden

2-492-20931-02

Year of manufacture 2012

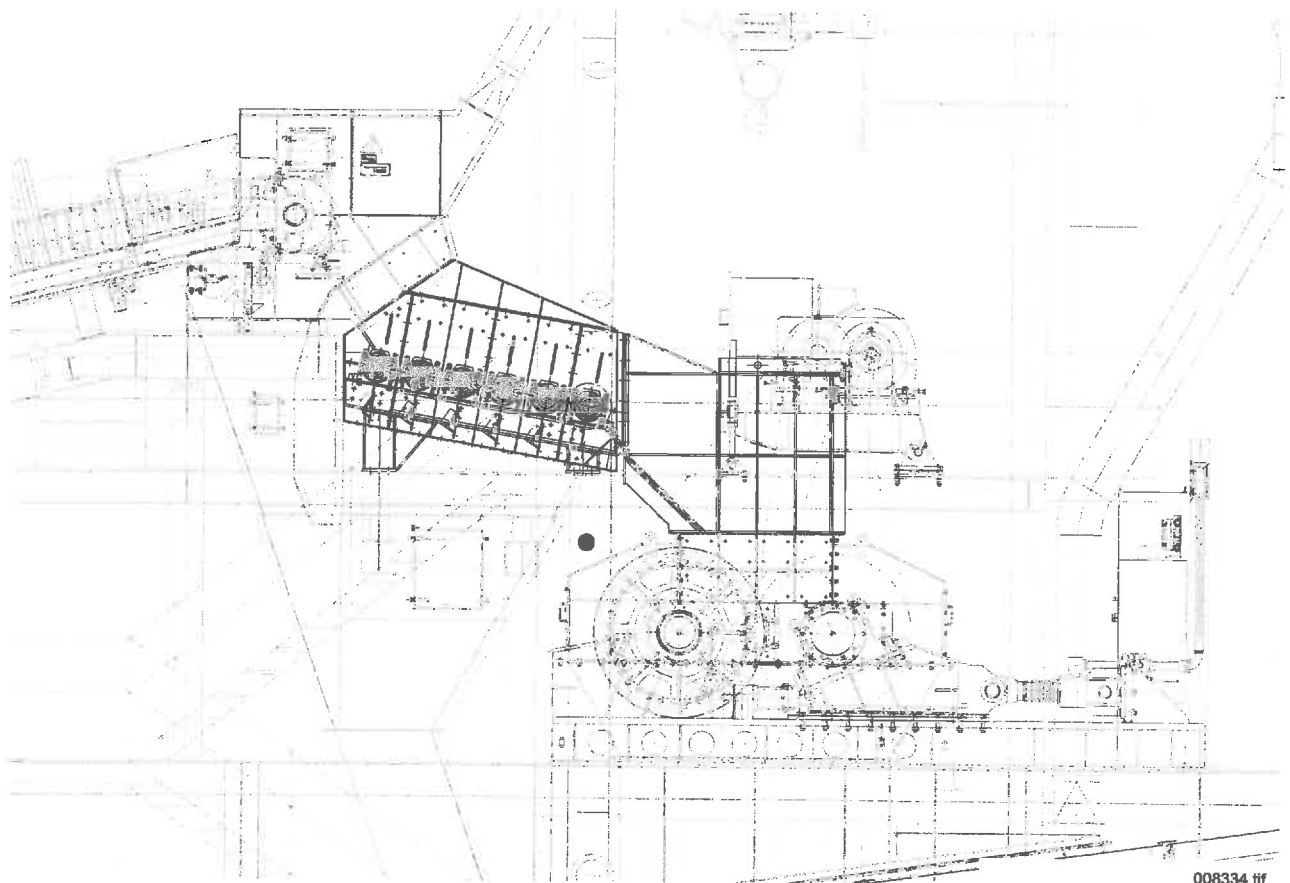

008334.tif

Revision level

Revision status	Date	Changes	Made by
0	24.08.2012 10.09.2012	Original created (German) Translation from original (English / Swedish)	Ritterbecks / Peters Ritterbecks
1			
2			
3			
4			

ThyssenKrupp Fördertechnik GmbH
P.O. Box 1463 – D - 59306 Ennigerloh
Schleebergstraße 12 – D - 59320 Ennigerloh
Telephone: +49 2524 30 0
Fax: +49 2524 2252
www.tk-processing.com

All parts protected by copyright. All rights reserved including those of translation into other languages. This document may not be processed, reproduced or distributed by any means, including electronic systems, in whole or in part without our express permission in writing.

Table of contents

1	User's guide 1 - 1
1.1	User groups 1 - 1
1.2	Structure of the safety notes 1 - 2
1.3	Definitions 1 - 3
1.4	General information 1 - 3
1.5	Liability and warranty 1 - 4
1.6	Copyright 1 - 4
1.7	Technical modifications 1 - 4
1.8	Stocking of spare parts 1 - 5
2	Technical data 2 - 1
3	General safety notes 3 - 1
3.1	Principles 3 - 1
3.2	Modifications and spare parts 3 - 2
3.3	Personnel 3 - 2
3.4	Noise hazard 3 - 3
3.5	Information regarding residual risks during daily operation 3 - 4
3.6	Fire protection 3 - 4
3.7	Disposal of consumables and process materials 3 - 5
4	Design and operating principle 4 - 1
4.1	Scope of application and designated use 4 - 1
4.2	Main components 4 - 2
4.3	Roller screen assembly groups 4 - 2
4.4	Operating principle 4 - 4
5	Transport, storage and assembly 5 - 1
5.1	Transport instructions 5 - 1

5.2	Hoisting devices and slinging equipment 5 - 3
5.2.1	Lifting gear 5 - 3
5.2.2	Lifting 5 - 4
5.2.3	Lifting ropes 5 - 6
5.2.4	Wire rope clamps 5 - 8
5.2.5	Lifting chains 5 - 9
5.2.6	Hook 5 - 11
5.2.7	Screw-type lifting eyes 5 - 11
5.2.8	Shackles 5 - 13
5.2.9	Slinging equipment and load protection 5 - 15
5.2.10	Substructures for loads 5 - 15
5.3	Storage requirements 5 - 17
5.3.1	General requirements 5 - 17
5.3.2	Storage facilities & other details 5 - 18
5.3.3	Special requirements 5 - 21
5.4	Installation planning 5 - 24
5.5	Preparation for installation 5 - 25
5.6	Delivery parts 5 - 26
5.7	General information on assembly 5 - 28
5.8	Assembly of the roller screen 5 - 29
6	Commissioning and operation 6 - 1
6.1	General information 6 - 1
6.2	Safety instructions for operation 6 - 1
6.3	Test run 6 - 2
6.4	Commissioning under load 6 - 2
6.5	Malfunctions 6 - 4
6.6	Shutting down 6 - 4
6.6.1	Normal operation 6 - 4
6.6.2	Overload switch-off 6 - 5
6.6.3	Emergency-stop system (by customer) 6 - 6
7	Maintenance 7 - 1
7.1	Important information on maintenance 7 - 1
7.1.1	Information about cleaning 7 - 4

7.1.2	Information on maintenance and inspection 7 - 5
7.1.3	Notes relating to repairs 7 - 7
7.2	Maintenance 7 - 8
7.2.1	Maintenance intervals 7 - 10
7.2.2	Bearings 7 - 11
7.2.3	Checking the screen shafts for wear 7 - 12
7.2.4	Cross bar / scraper bar, screen base 7 - 14
7.2.5	Drive 7 - 14
7.3	Repairs 7 - 16
7.3.1	Screen shaft replacement 7 - 17
7.3.2	Bearing replacement 7 - 20
7.3.3	Bearings with adapter sleeves 7 - 21
7.3.4	Shaft sealing rings 7 - 26
7.4	Screwed and bolted connections 7 - 27
7.4.1	Machine structures 7 - 27
7.4.2	High-tensile bolted joints 7 - 28
8	Lubrication 8 - 1
8.1	Introduction and technical instructions 8 - 1
8.2	Storage of lubricants 8 - 2
8.3	General information on lubrication 8 - 3
8.3.1	Oil groups 8 - 3
8.3.2	Open toothed gears 8 - 4
8.3.3	Lubricant lines 8 - 5
8.4	Table of lubricants (Index 8) 8 - 6
8.4.1	Standard lubricants 8 - 6
8.4.2	Special lubricants 8 - 9
8.5	Lubricating instructions 8 - 12
9	ANNEX 9 - 1
9.1	Drawings
9.2	Drive unit
9.3	Speed monitor - screen shafts
9.4	Central lubrication system
9.5	Screw-in heater

